COMMSCOPE XPND™

TC-40230-IP-EN - REV A -



PRODUCT INFO



PARTS LIST		
QTY	DESCRIPTION	
1	PANEL (1RU, 1.5RU OR 3RU)	
1	23IN BRKTS & CBL TIE-OFF KIT	
2	PANEL DOORS	
1	QUICK START INSTRUCTIONS	

Installing the doors






TX20 TORX SCREW-DRIVER

NOTE:

All pictures in these instructions show the 1.5RU panel as a reference.

Removing panel from the box

Open the box and remove the panel and other items from the box. Check the parts list to ensure all items are present. Obtain the required tool indicated only when moving the mounting brackets.

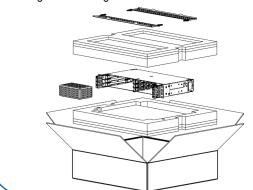

Panel mounting options


2" Offset position

Panels come with 19" brackets pre-mounted in 2" offset.




5" Offset position

To mount the brackets at 5" position remove all screws with which the brackets are installed and remount the brackets using the holes located 3" back on the panel.



Overall dimensions of the panels (after assembly)

The overall width and length of the panels is shown in the picture below.

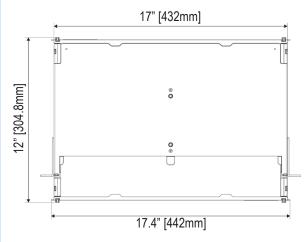


The overall width of the panels, including the mounting brackets, is 19" [482.6mm] or 23" [584.2mm] depending on which brackets are installed. The height of the panels can be found in this table:

PANEL HEIGHTS			
1RU	1.75" [44.45mm]		
1.5RU	2.62" [66.55mm]		
3RU	5.25" [133.35mm]		

23" Mounting brackets

The panels come with 19" brackets which can be swapped for 23" brackets if necessary (refer to the mounting kit). To replace the brackets simply remove all screws from the 19" bracket, install the 23" and re-tighten all screws in the same positions. If a different offset is required.

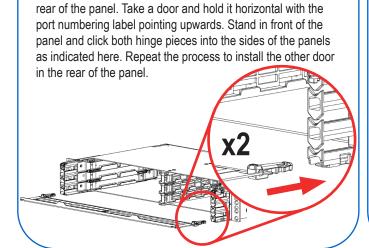

There are 2 identical doors. One for the front and one for the