


CELLMAX-D-CPUSE-O

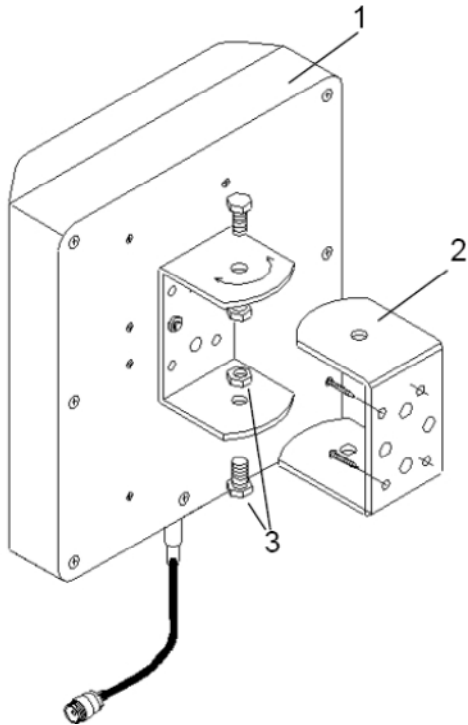

Installation Steps

- 1) Drill four holes in wall per pattern of holes in bracket, item 2.
- 2) Mount bracket to the wall using dowels and screws.
- 3) Mount antenna item 1, to bracket with two screws and nuts, item 2. Before fastening the screws align antenna horizontally.
- 4) Connect RF cable.