

TC-1333-IP
Rev A, Apr 2017
www.commscope.com


Content	1 General
	1.1 Tooling
	1.2 Kit Content
	2 Preparation 1HU Splitter Shelf
	3 Mounting the brackets on the shelf (back mounting) 19" - ETSI
	4 Mounting the brackets on the shelf (front mounting) 19" - ETSI
	5 Mounting shelf into the cabinet
	6 Mounting the OCM6 in the shelf

1 General


1.1 Tooling

Standard installation tooling for shelf


1.2 Kit Content

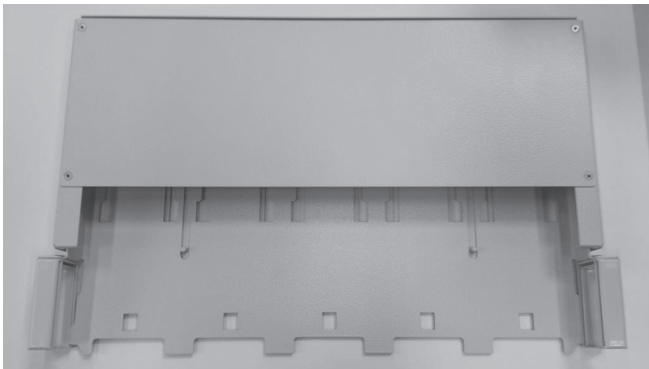


1x Shelf

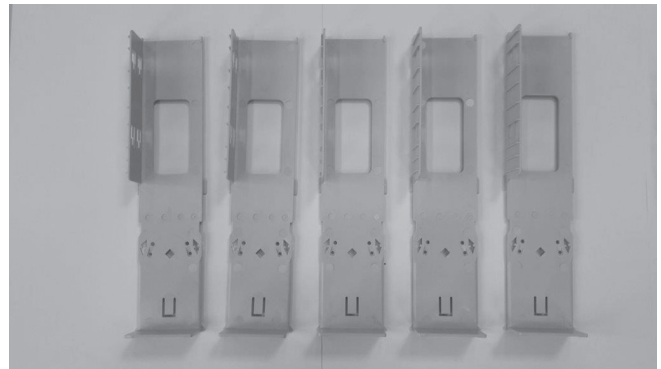


5x 1HU Retainer

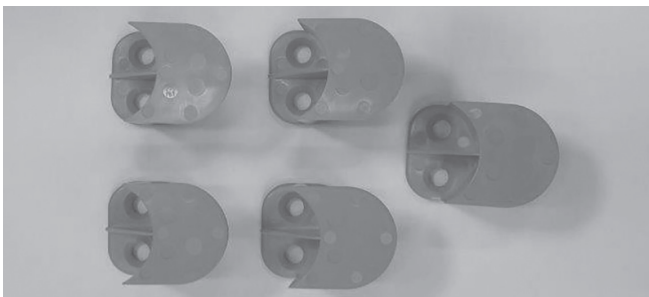

5x Radius limiter (Rlimiter)

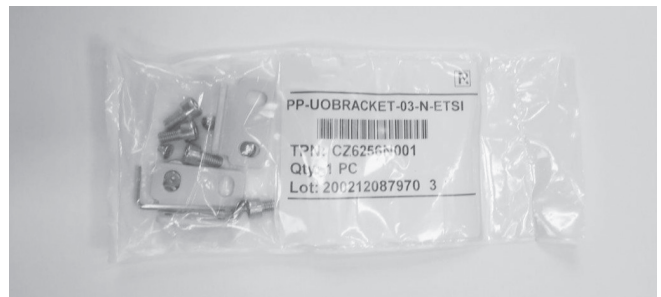

1x Bracket kit: 19"

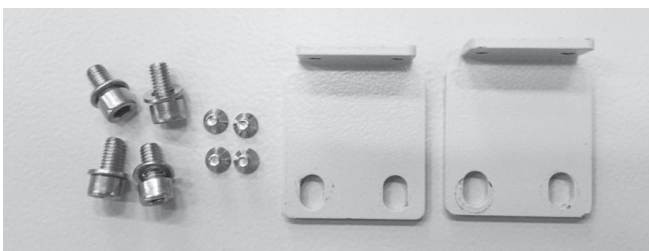


1x Bracket kit: ETSI

2 Preparation 1HU Splitter Shelf




leave right side

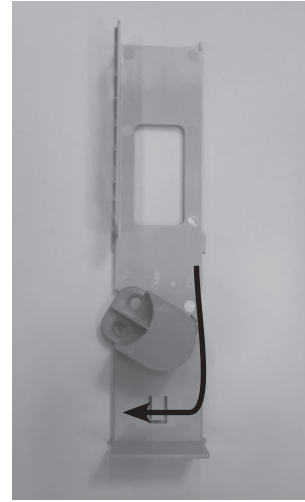


leave left side


2.1 Install the Rlimiters on the right position depending on where the patchcords will leave the shelf.

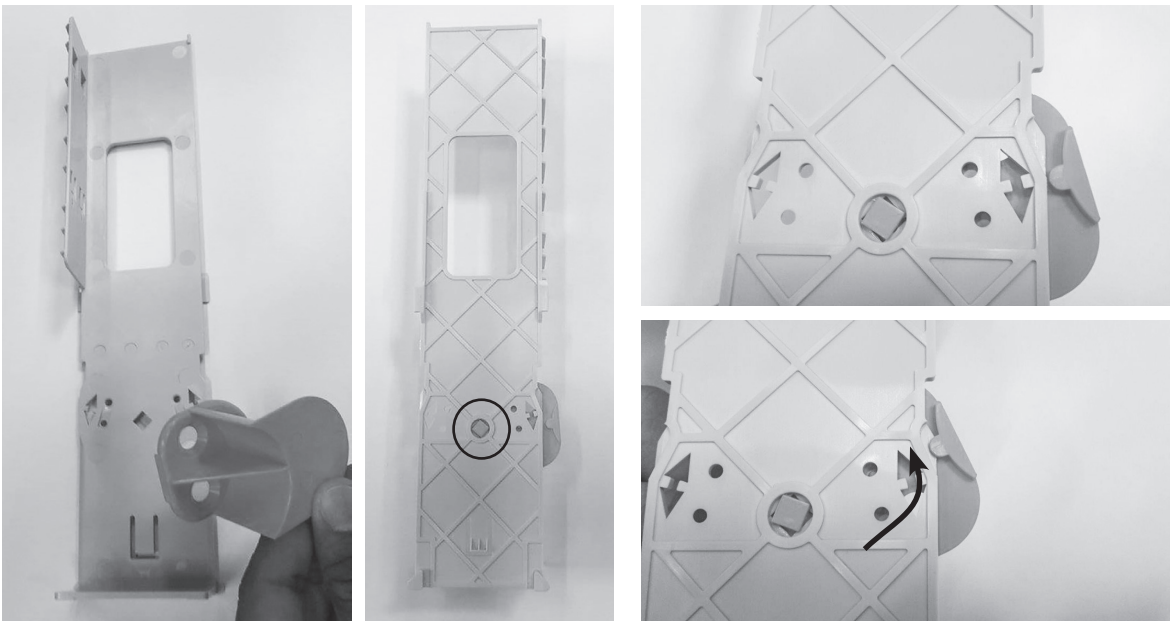


2.2 Take retainer and rlimiter and mount them together. Insure that the orange square fits into the opening and turn until it locks. Repeat this for the other four pieces.

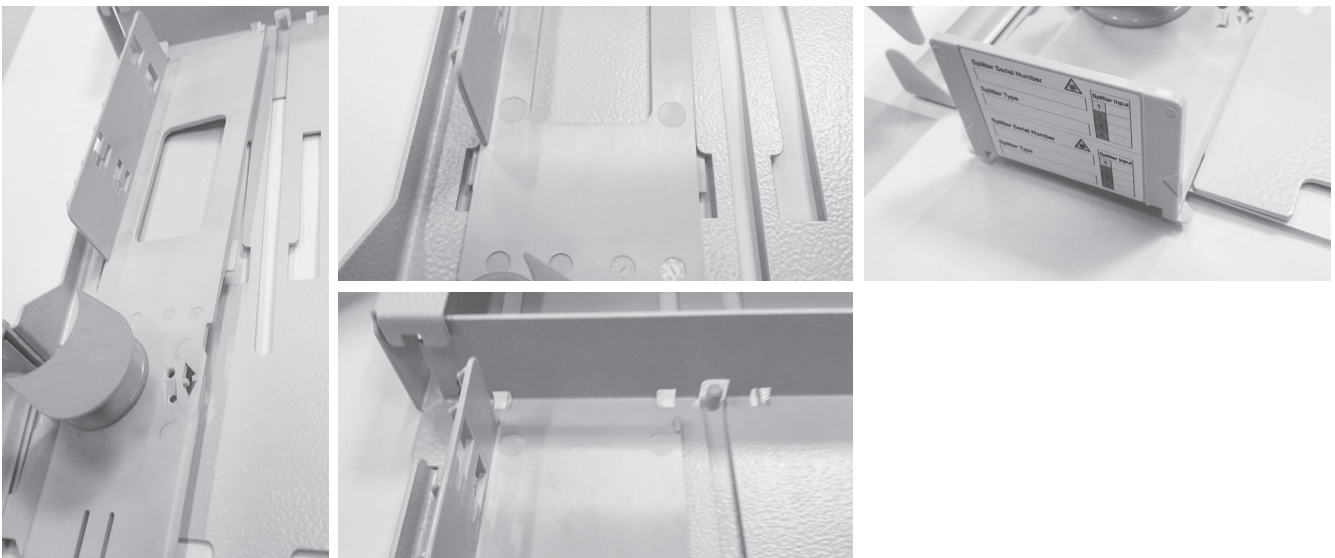

2.3 Install the retainer in the shelf. Make sure that all plastic locking lips are under the metal (front, middle and back) and slide retainer slowly to the back of the shelf until it's locked. Repeat this for all other retainers.

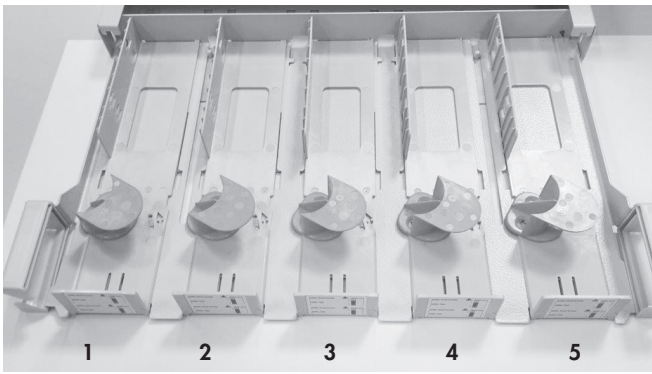


Patchcords leave right

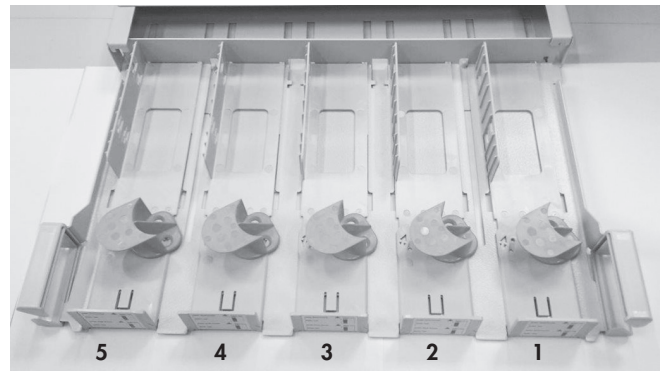


Patchcords leave left

Remark : Always mount the first splitter on position 1, depending on where the patchcords leave the shelf.

3 Mounting the brackets on the shelf (back mounting) 19" / ETSI

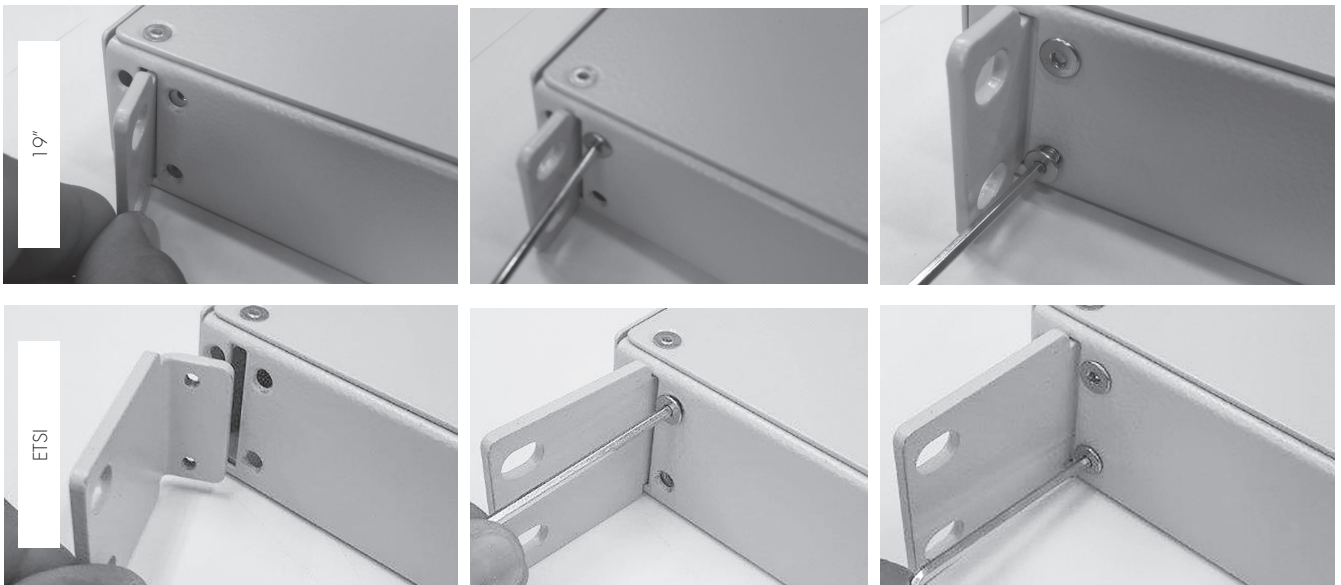


3.1 Slide bracket into the opening, then fix with 2 screws.

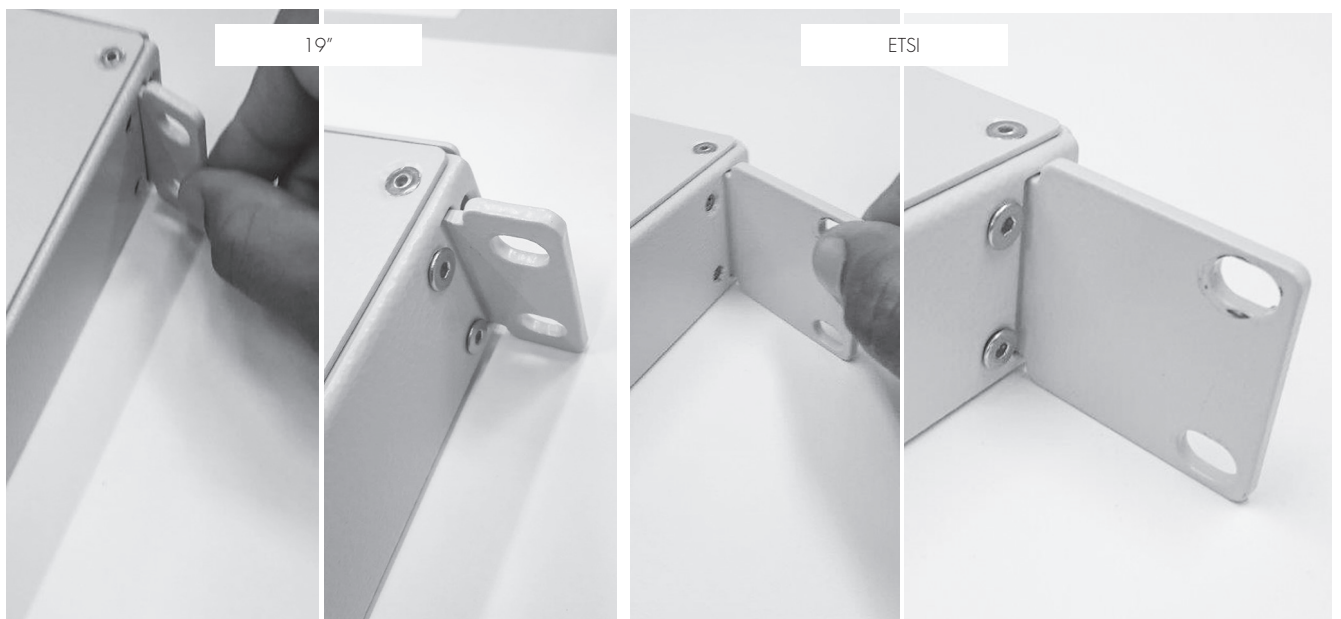

3.2 Do the same on the other side of the shelf.

4 Mounting the brackets on the shelf (front mounting) 19" / ETSI

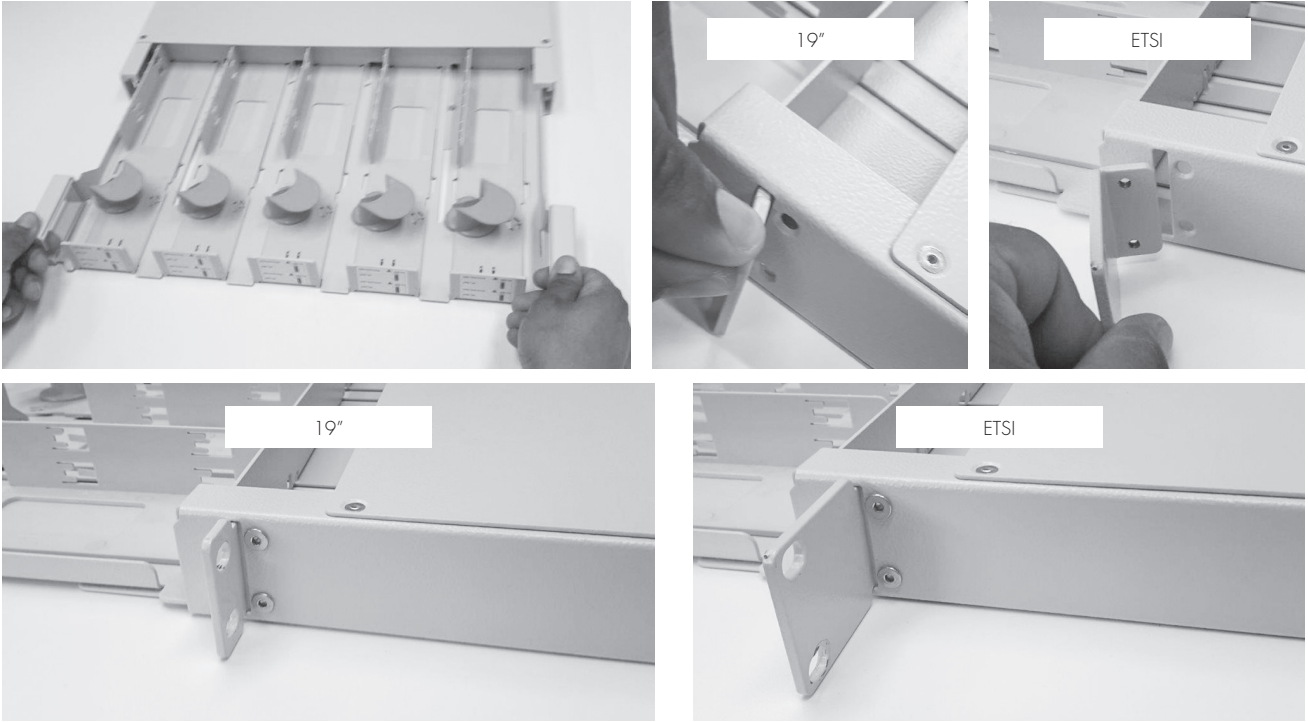

4.1 Slide open the shelf. Slide bracket into the opening and fix with 2 screws. Repeat the step like described in point 3.


5 Mounting shelf into the cabinet / rack




5.1 Install the cage nuts into the cabinet on the needed position. Put the screw and washer onto the Allen Key.




5.2 Hold shelf in place and install first onto one side of the cabinet.

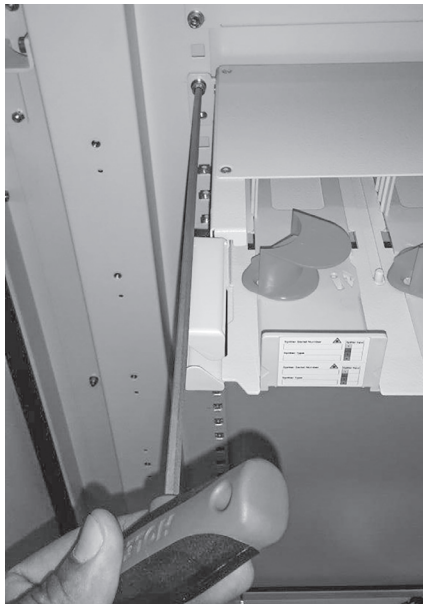

5.3 Hold shelf in place and install onto the other side of the cabinet.

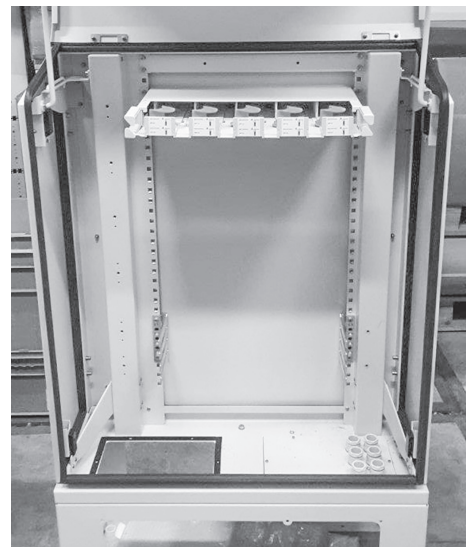


5.4 Fixate with the remaining screws.

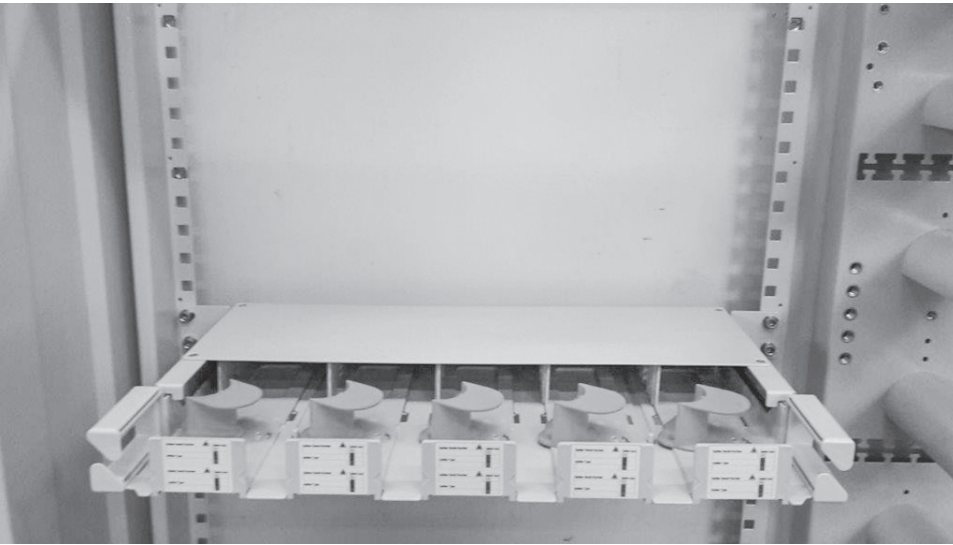

5.5 To install into the rack, repeat steps from 5.1 on.



6 Mounting OCM6 into shelf

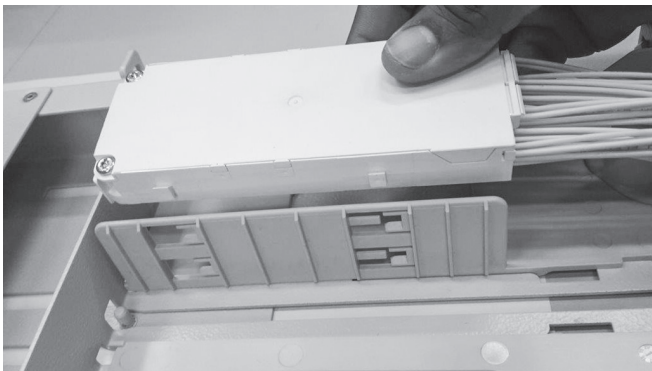

6.1 Open the shelf, then place OCM6 splitter on the retainer.




6.2 Slide slots into the opening and pull the splitter to the front.

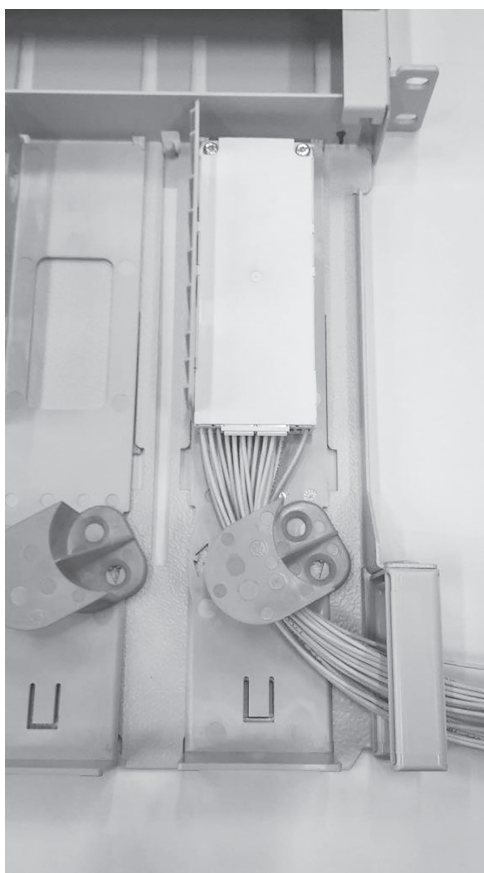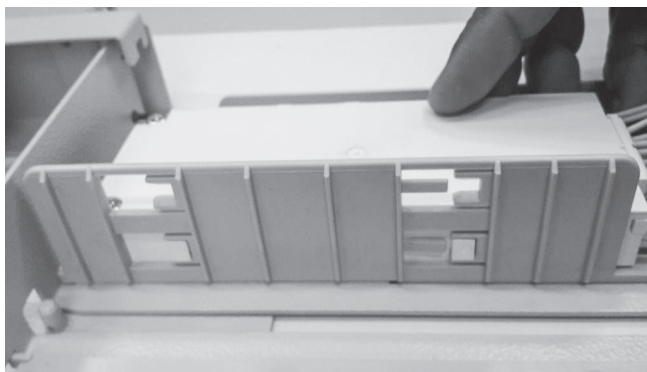


6.3 Guide the patchcords besides the radius limiter and through the cable ring.



6.4 Repeat this for the second and all the other splitters that are to be installed.

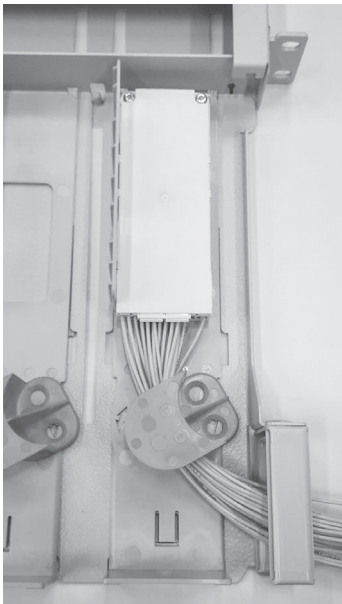

Patchcords leave right

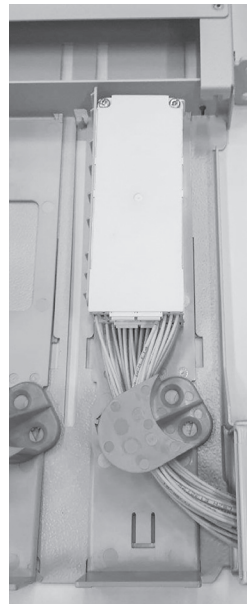

Patchcords leave left

To find out more about CommScope® products, visit us on the web at www.commscope.com

For technical assistance, customer service, or to report any missing/damaged parts, visit us at: <http://www.commscope.com/SupportCenter>

© 2017 CommScope, Inc. All rights reserved.

All trademarks identified by ® or ™ are registered trademarks or trademarks, respectively, of CommScope, Inc.

This document is for planning purposes only and is not intended to modify or supplement any specifications or warranties relating to CommScope products or services.

This product is covered by one or more U.S. patents or their foreign equivalents. For patents, see: www.commscope.com/ProductPatent/ProductPatent.aspx.